




Interior PS/Polystyrene Moulding



## Product Overview


PS FRAME/PANEL MOULDING

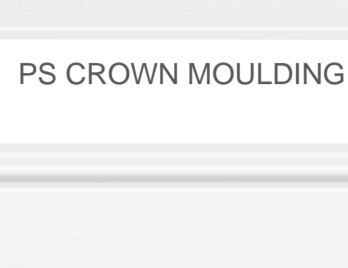

PS CROWN MOULDING




PS SKIRTING/BASEBOARD MOULDING

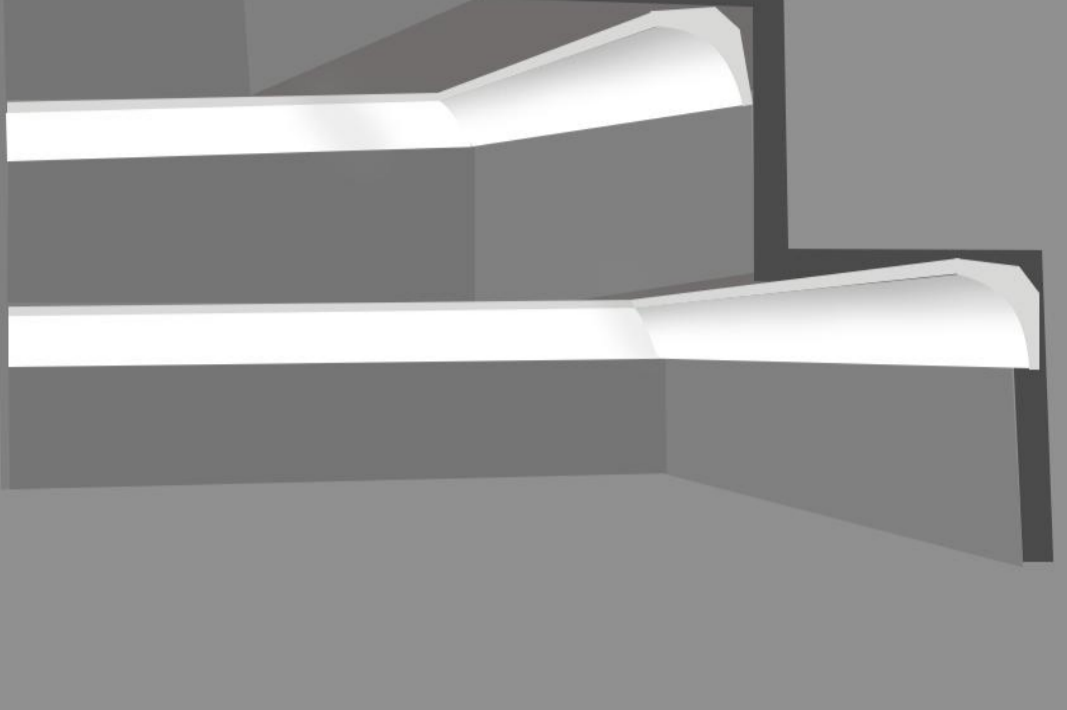

## Ps Crown Moulding

www.homywpc.com

### CROWN MOULDING TYPES

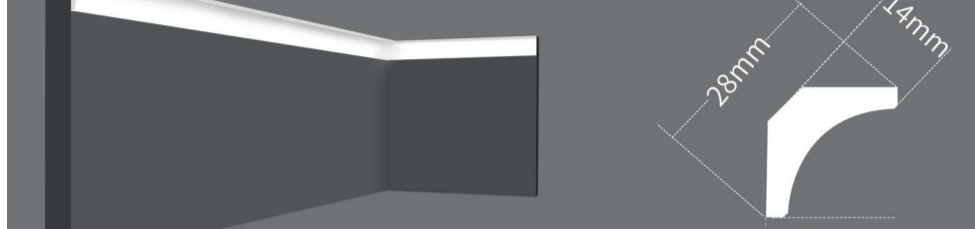

HM19-W

SIZE: 20mm × 28mm × 14mm




HM21-W

SIZE: 15mm × 30mm × 10mm




HM33-W

SIZE: 25mm × 37mm × 11mm

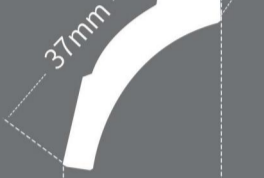

HM157-W


SIZE: 99mm(W) × 45mm(T)

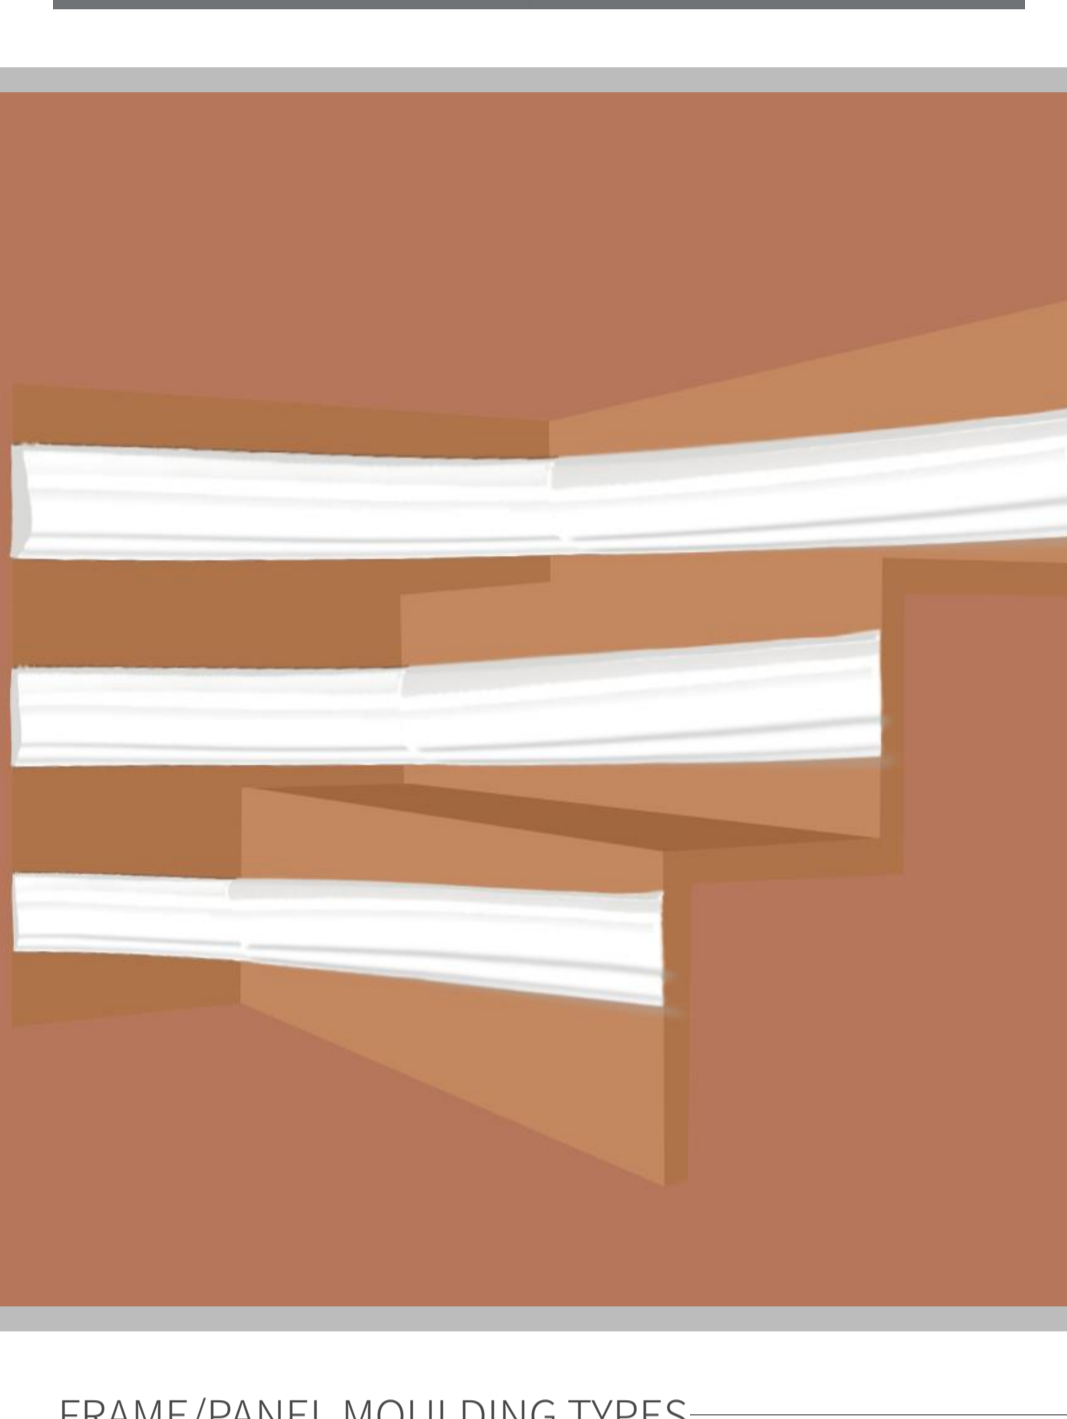

## Ps Frame/Panel Moulding


www.homywpc.com

### FRAME/PANEL MOULDING TYPES

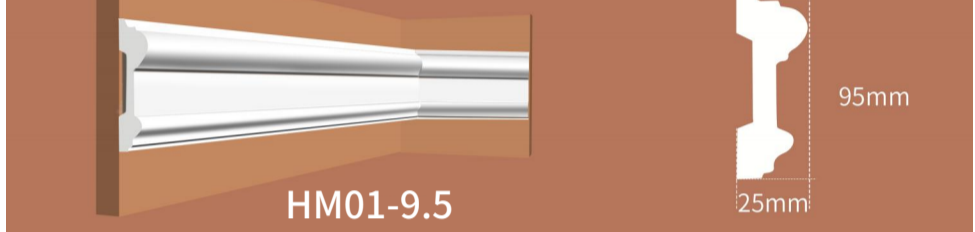


HM01-9.5

SIZE: 95mm(W) × 25mm(T)

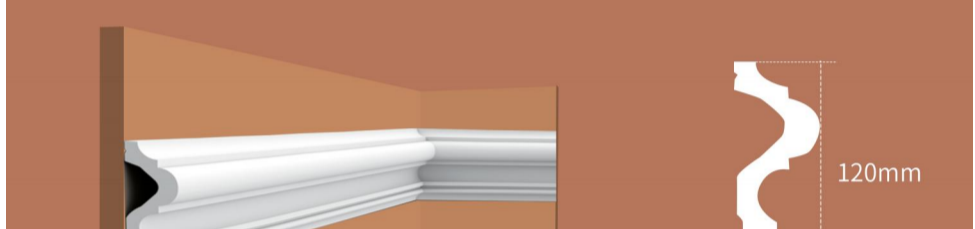


HM02-12

SIZE: 120mm(W) × 30mm(T)

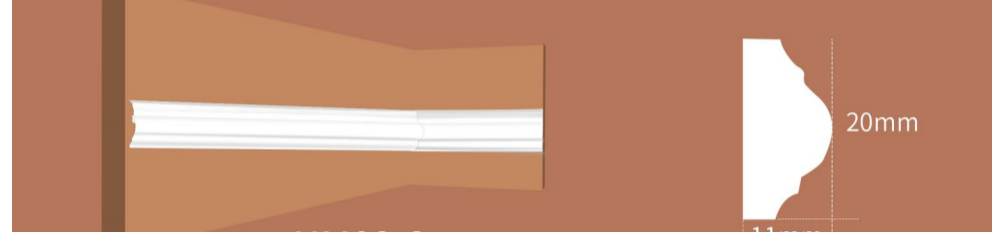


HM02-2

SIZE: 20mm(W) × 11mm(T)

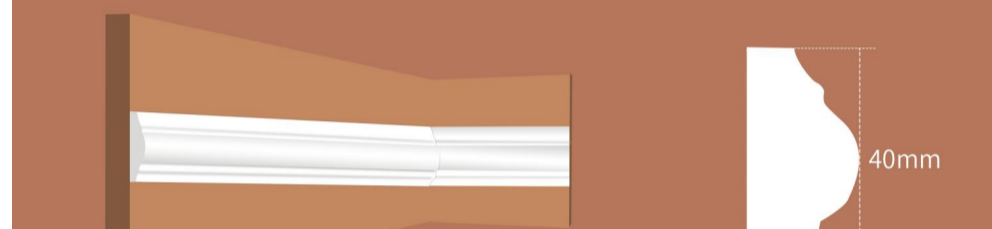

HM02-4

SIZE: 40mm(W) × 18mm(T)

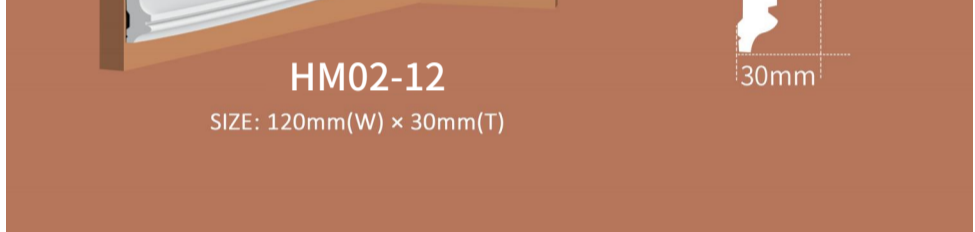


HM02-6

SIZE: 60mm(W) × 22mm(T)




HM09-4

SIZE: 40mm(W) × 18mm(T)

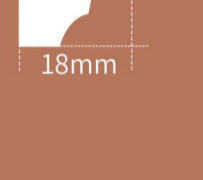


HM02-10

SIZE: 20mm(W) × 10mm(T)

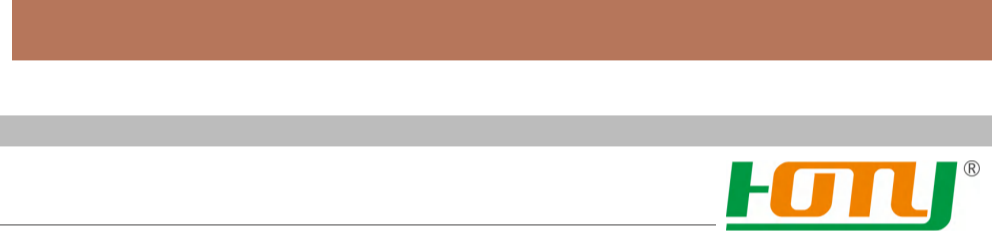

HM09-6

SIZE: 60mm(W) × 24mm(T)

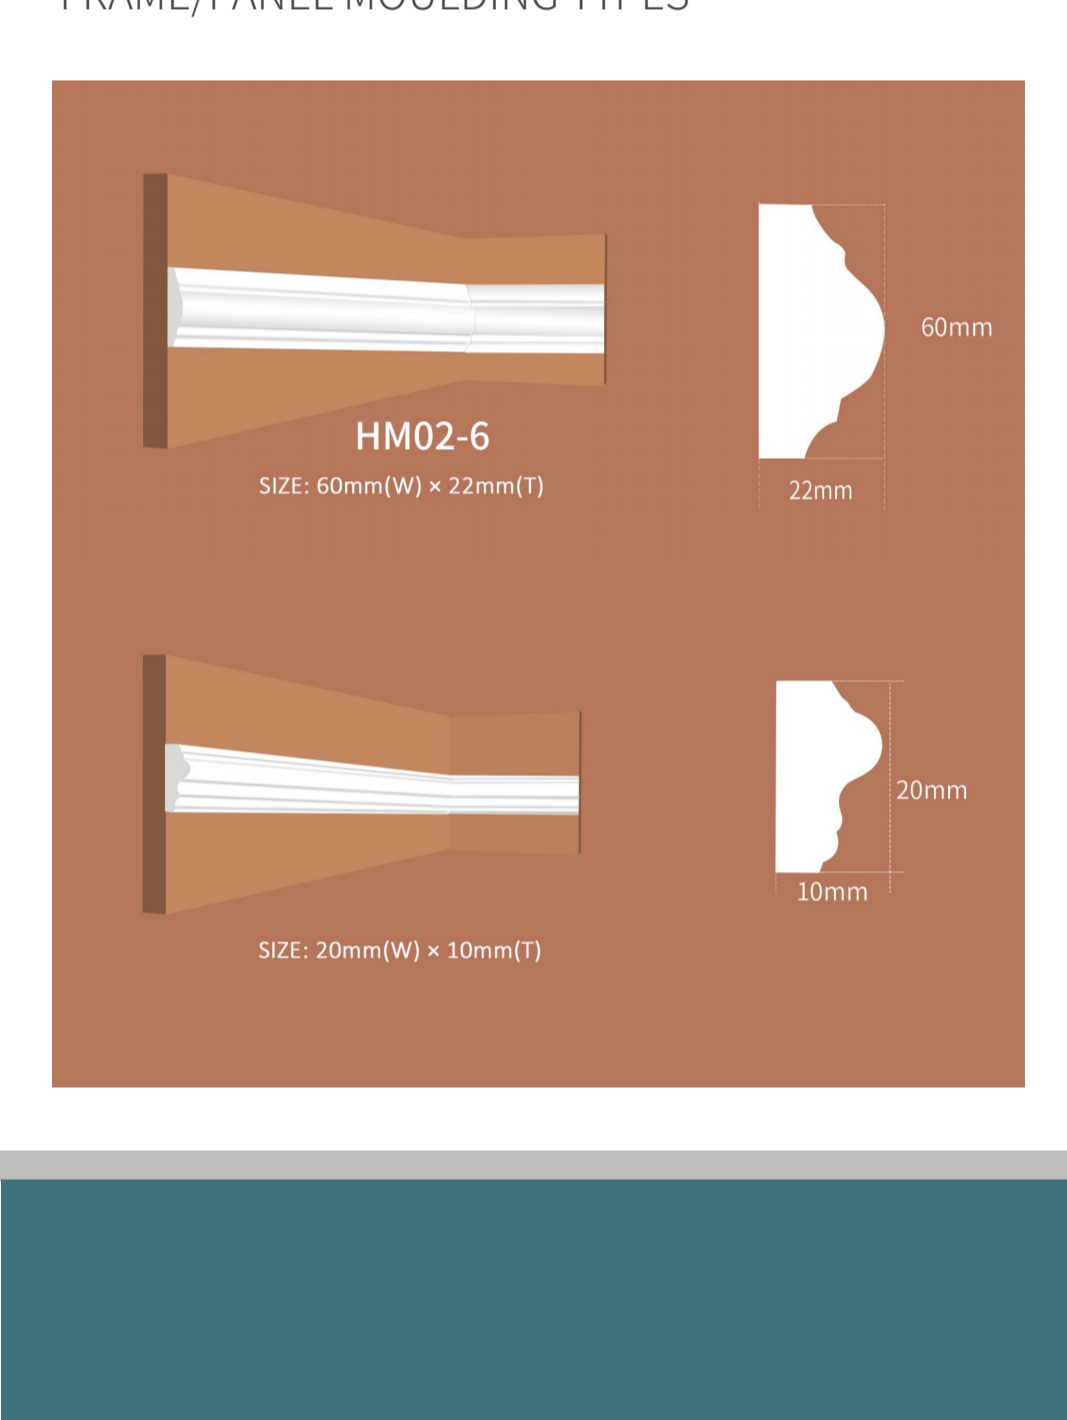

## Ps Skirting /Baseboard Moulding


www.homywpc.com

### SKIRTING/BASEBOARD MOULDING TYPES





HM03-10

SIZE: 100mm(W) × 15mm(T)

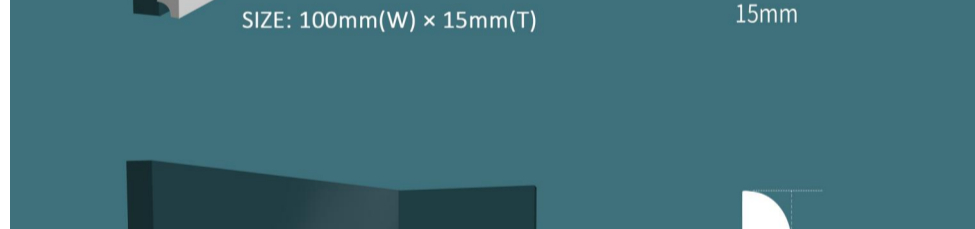

HM03-12

SIZE: 120mm(W) × 17mm(T)

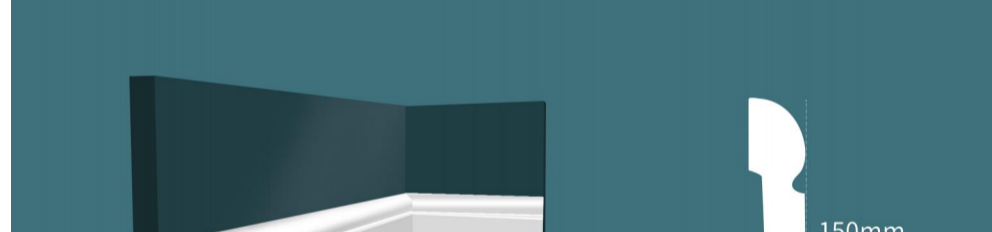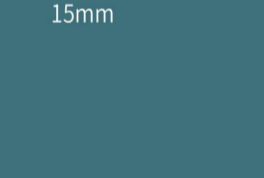


HM03-15

SIZE: 150mm(W) × 20mm(T)




HM05-10

SIZE: 100mm(W) × 15mm(T)

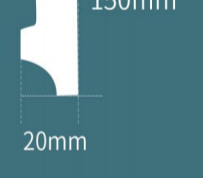



HM05-12

SIZE: 120mm(W) × 17mm(T)

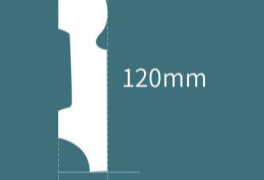


HM06-10

SIZE: 100mm(W) × 17mm(T)

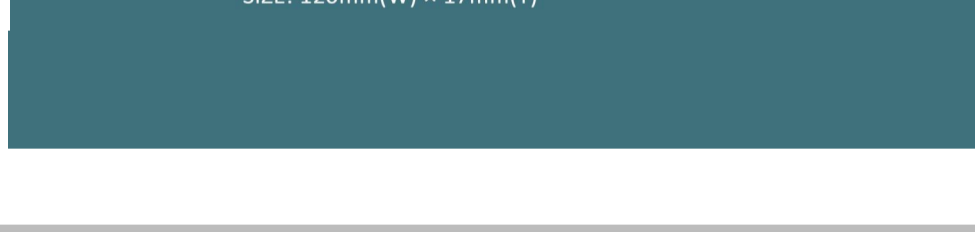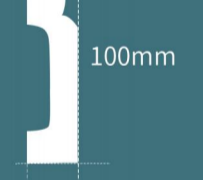


HM05-15

SIZE: 150mm(W) × 17mm(T)

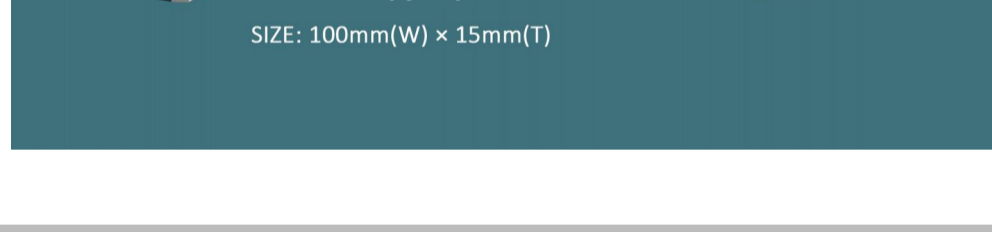


HM06-12

SIZE: 120mm(W) × 17mm(T)

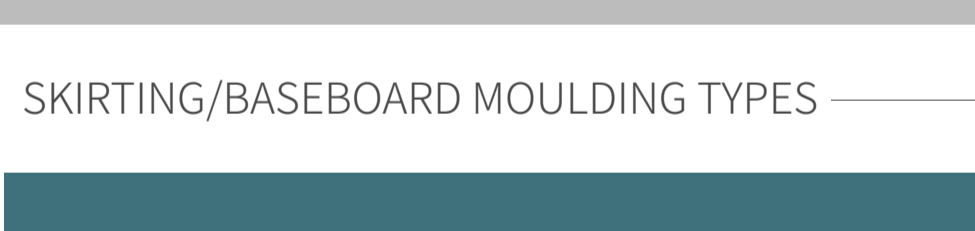

HM06-15

SIZE: 150mm(W) × 20mm(T)

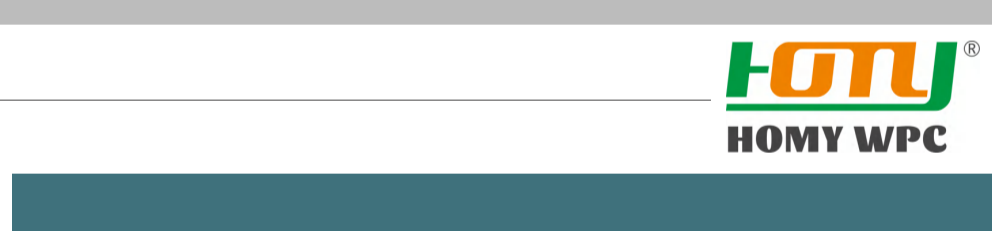

HM07-10

SIZE: 100mm(W) × 13mm(T)




HM07-15

SIZE: 150mm(W) × 18mm(T)





HM07-12

SIZE: 120mm(W) × 15mm(T)

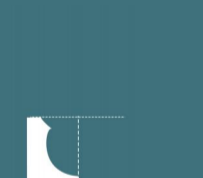


HM08-10

SIZE: 100mm(W) × 11mm(T)

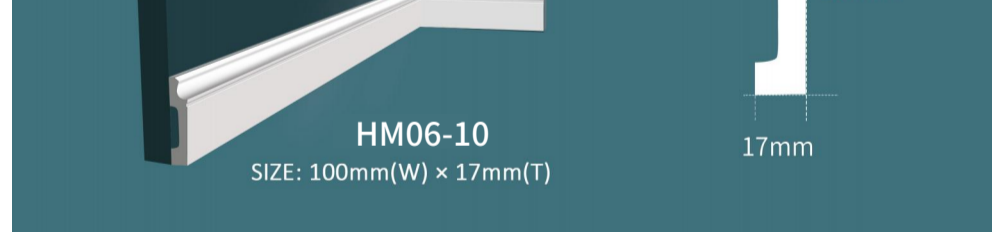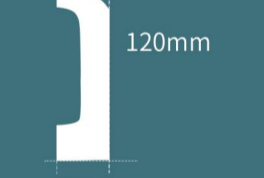

HM08-15

SIZE: 150mm(W) × 18mm(T)

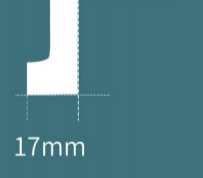


HM08-12


SIZE: 120mm(W) × 15mm(T)




### PS MOULDING ADVANTAGE

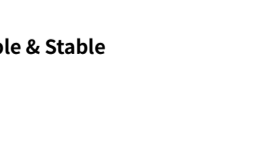


### PS MOULDING INSTALLATION

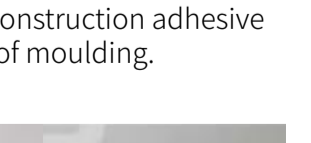

100% Waterproof

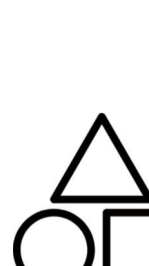

Easy to Clean

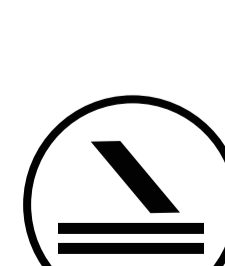


Durable & Stable




1 Cut moulding to size needed.




2 Glue/Apply construction adhesive on the back of moulding.

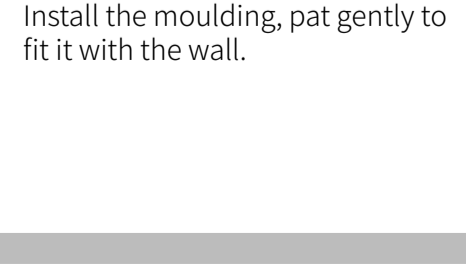


3 Install the moulding, pat gently to fit it with the wall.

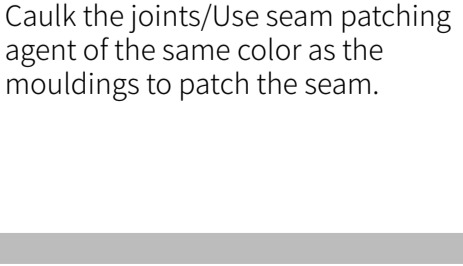


4 Caulk the joints/Use seam patching agent of the same color as the mouldings to patch the seam.

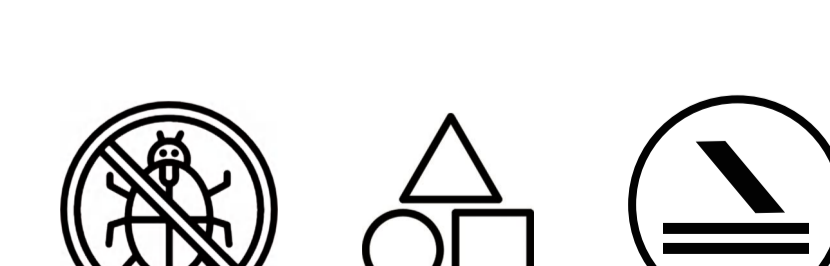


Anti Termites

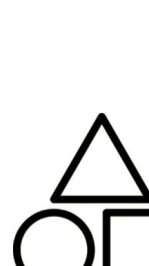


Easy to Install

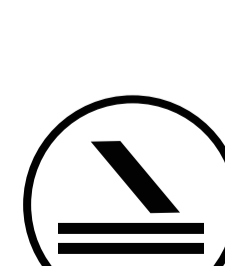


Scratch-Resistant

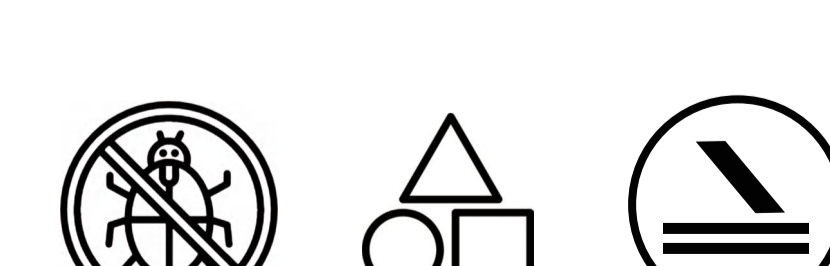


PS Moulding Package

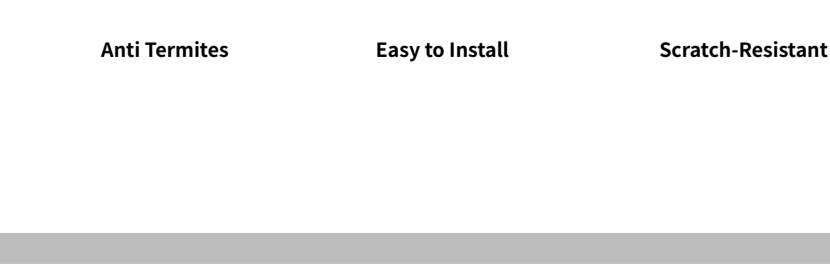


Option 1: Standard Packing(Without pallet)

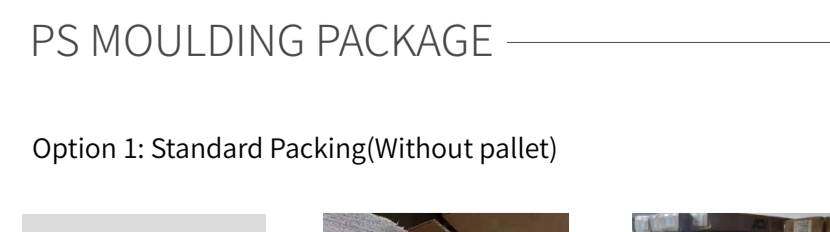

Option 2: Advanced Packing(With pallet)

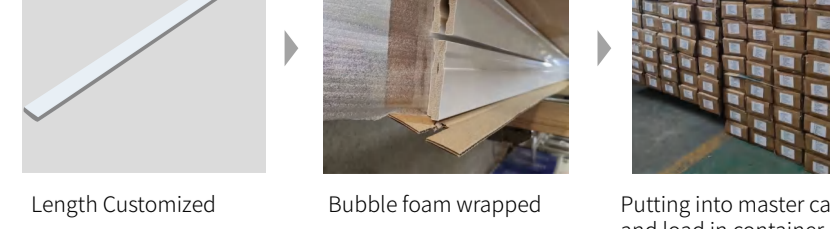

After the option 1, pack with pallet. All parts are protected by old carton and wood hat and belt, more safe and convenient to delivery.

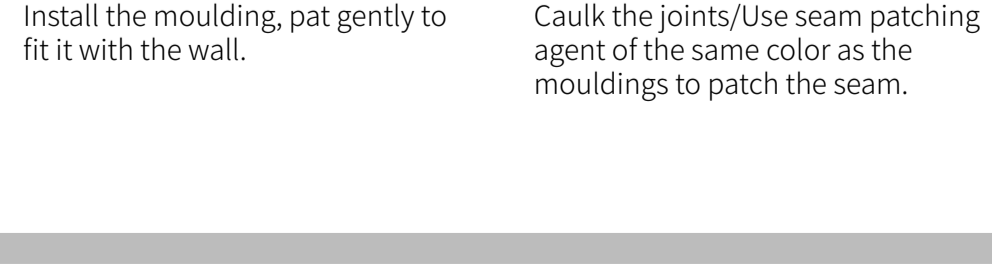

### PS MOULDING PACKAGE

