




Collection	Pictures	Model Drawing	Size
HM-F01 SERIES		118mm	Size:118(W)mm * 11(T)mm
HM-F02 SERIES		12Inom	Size:121(W)mm * 11(T)mm
HM-F03 SERIES		118mm	Size:118(W)mm * 11.5(T)mr
HM-F04 SERIES		111M	Size:121(W)mm * 11(T)mm



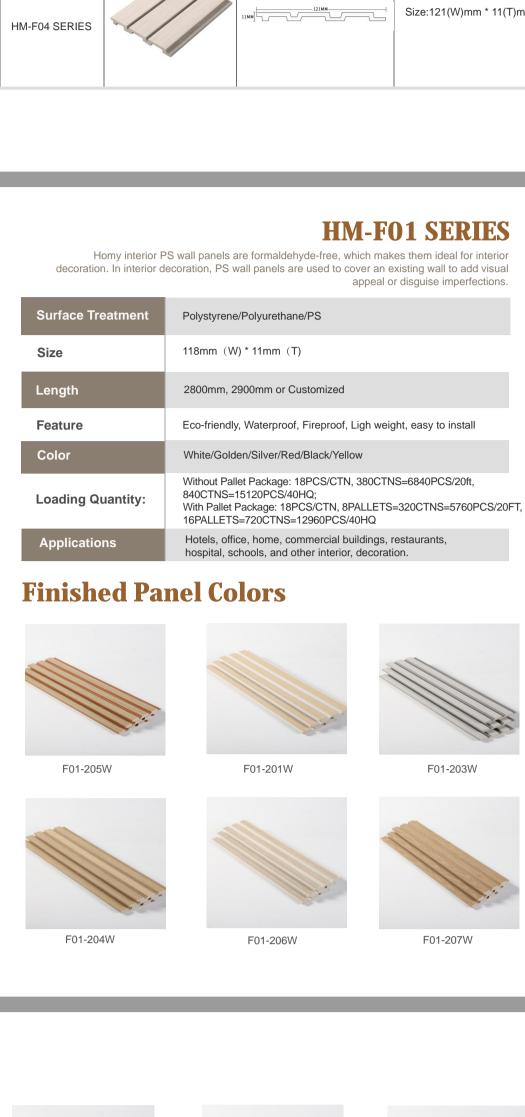



F01-209W



F01-226W

F01-212W




F01-C02

F01-C04

F01-218W

F01-213W

F01-229W

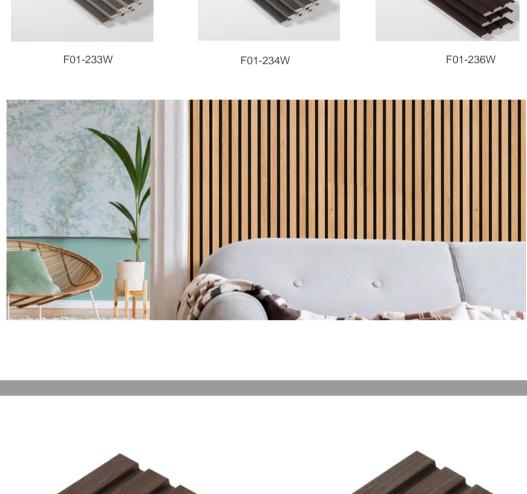

F01-230W

F01-231W



F01-C01





Surface Treatment

Loading Quantity:

F03-504

Size

Length

Feature

Color

F01-438W




F01-439W

F01-2061D

F01-2081J






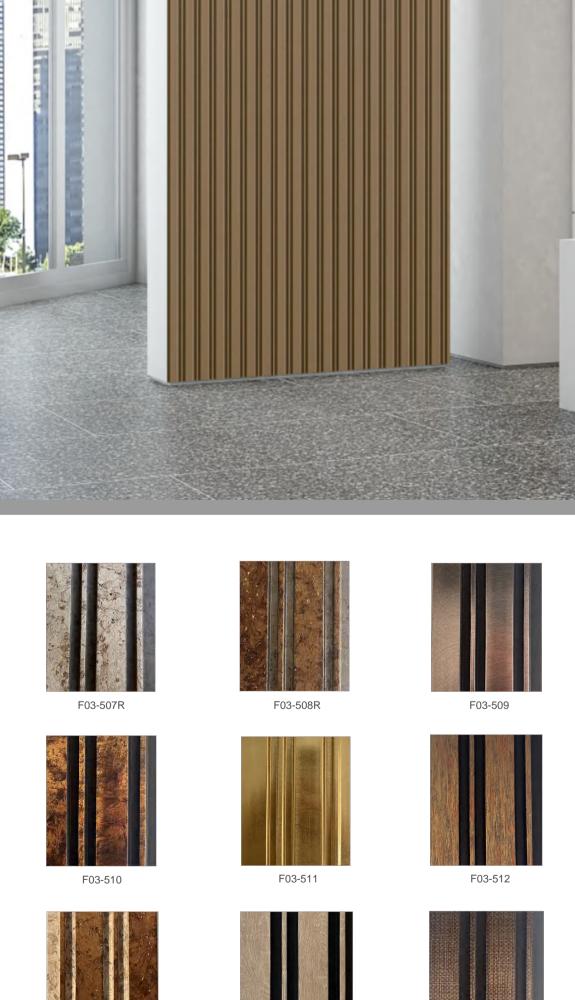





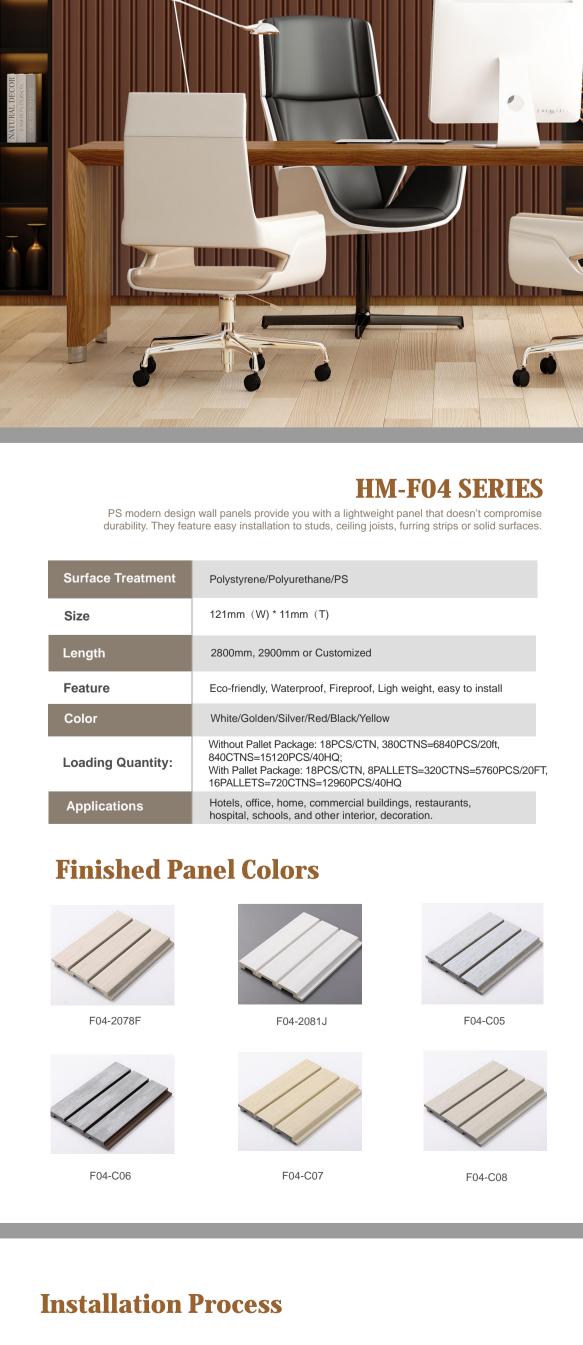





Nail-free Adhesive


HM-F01 Edge Trim



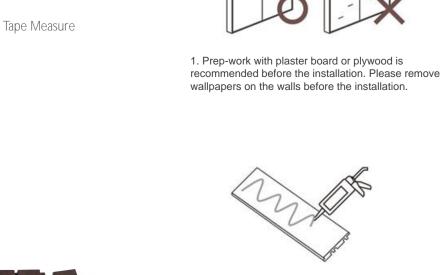

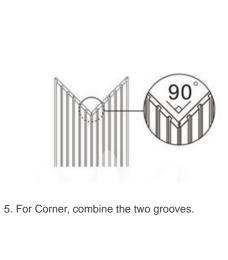


3. Apply Nail free glue on the back of wall panel.

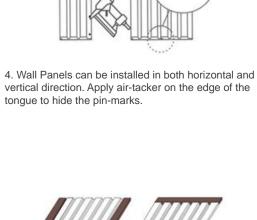

2. Circular saw can be used for cutting.



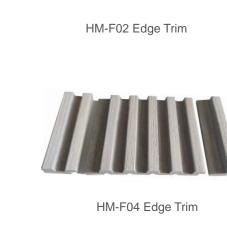





6. Coordinating edge trims can be used for more