



**Read All Section Before You Install**

To get latest information, please visit our website: [www.homywpc.com](http://www.homywpc.com)

These installation guidelines will direct you through the process of installing HOMY products. These installation methods are recommended by HOMY, but they may not cover every installation scenario you may encounter. Since each installation is unique in its performance requirements, the ultimate installation method used is the sole responsibility of the installer. HOMY recommends that all designs be reviewed by a licensed architect, engineer or local building official before installation. Make sure your plans meet local building codes before you begin the installation.

**Safety**

Appropriate safety equipment is necessary when you deal with any type of construction project. HOMY highly recommends, but is not limited to the following safety equipment: gloves, a respiratory protection, long sleeves, pants, and safety glasses.

**Planning Ahead**

To determine how much HOMY deck tiles material you will need, start by calculating the square footage of your wall surface by multiplying length by width. When calculating the amount of deck tiles you will need, it is recommended that you add roughly 10% to the total for a scrap factor. A layout for your deck tiles should be planned before starting installation to ensure the best possible locking deck tiles for your project. Building codes and zoning ordinances generally apply to permanent structures, meaning anything that's anchored to the ground or attached to the house. So nearly every kind of deck tiles requires permits and inspections from a local building department. We recommend drawing out a site plan of your proposed project that you intend to do to minimize errors and make your perfect wall deck tiles.

**Expansion and Contraction**

HOMY deck tiles planks will experience expansion and contraction with changes in temperature. Expansion and contraction are most significant where extreme temperature changes occur. Changes in length are most significant during the installation process, and should be taken into account if working in extreme temperatures. A good example would be cutting your planks during a hot afternoon, letting them sit outside overnight in the cool air and then installing them the next morning, and you will notice a certain amount of contraction. The best way to minimize this problem is to fasten your planks after cutting as soon as possible.

01



**Read All Section Before You Install**

To get latest information, please visit our website: [www.homywpc.com](http://www.homywpc.com)

**Environment**

You need a clean, smooth, flat and strong surface to install HOMY products. Make sure your plans meet local building codes before installing any type of tube. If installation is not that urgent.

**Deck Tiles Features**




Waterproof



Stable & Durable



Fireproof

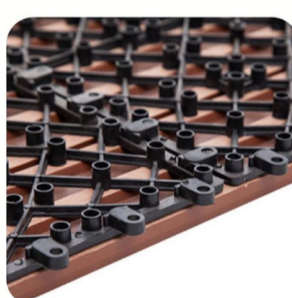

Plastic Backing


02



**Read All Section Before You Install**

To get latest information, please visit our website: [www.homywpc.com](http://www.homywpc.com)


**Installation Process**

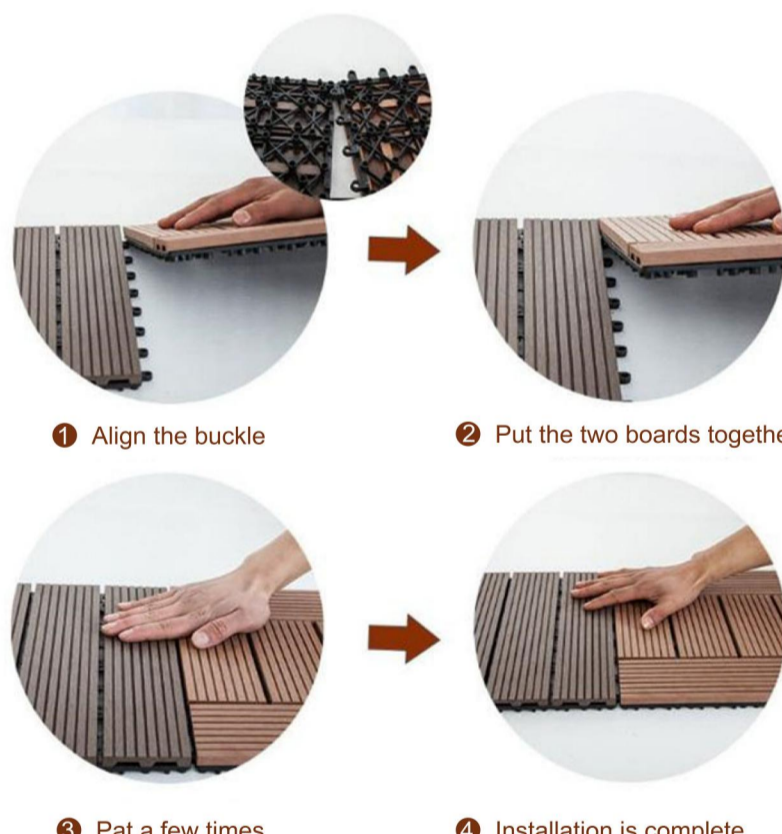

03



**Final Installation Effect**

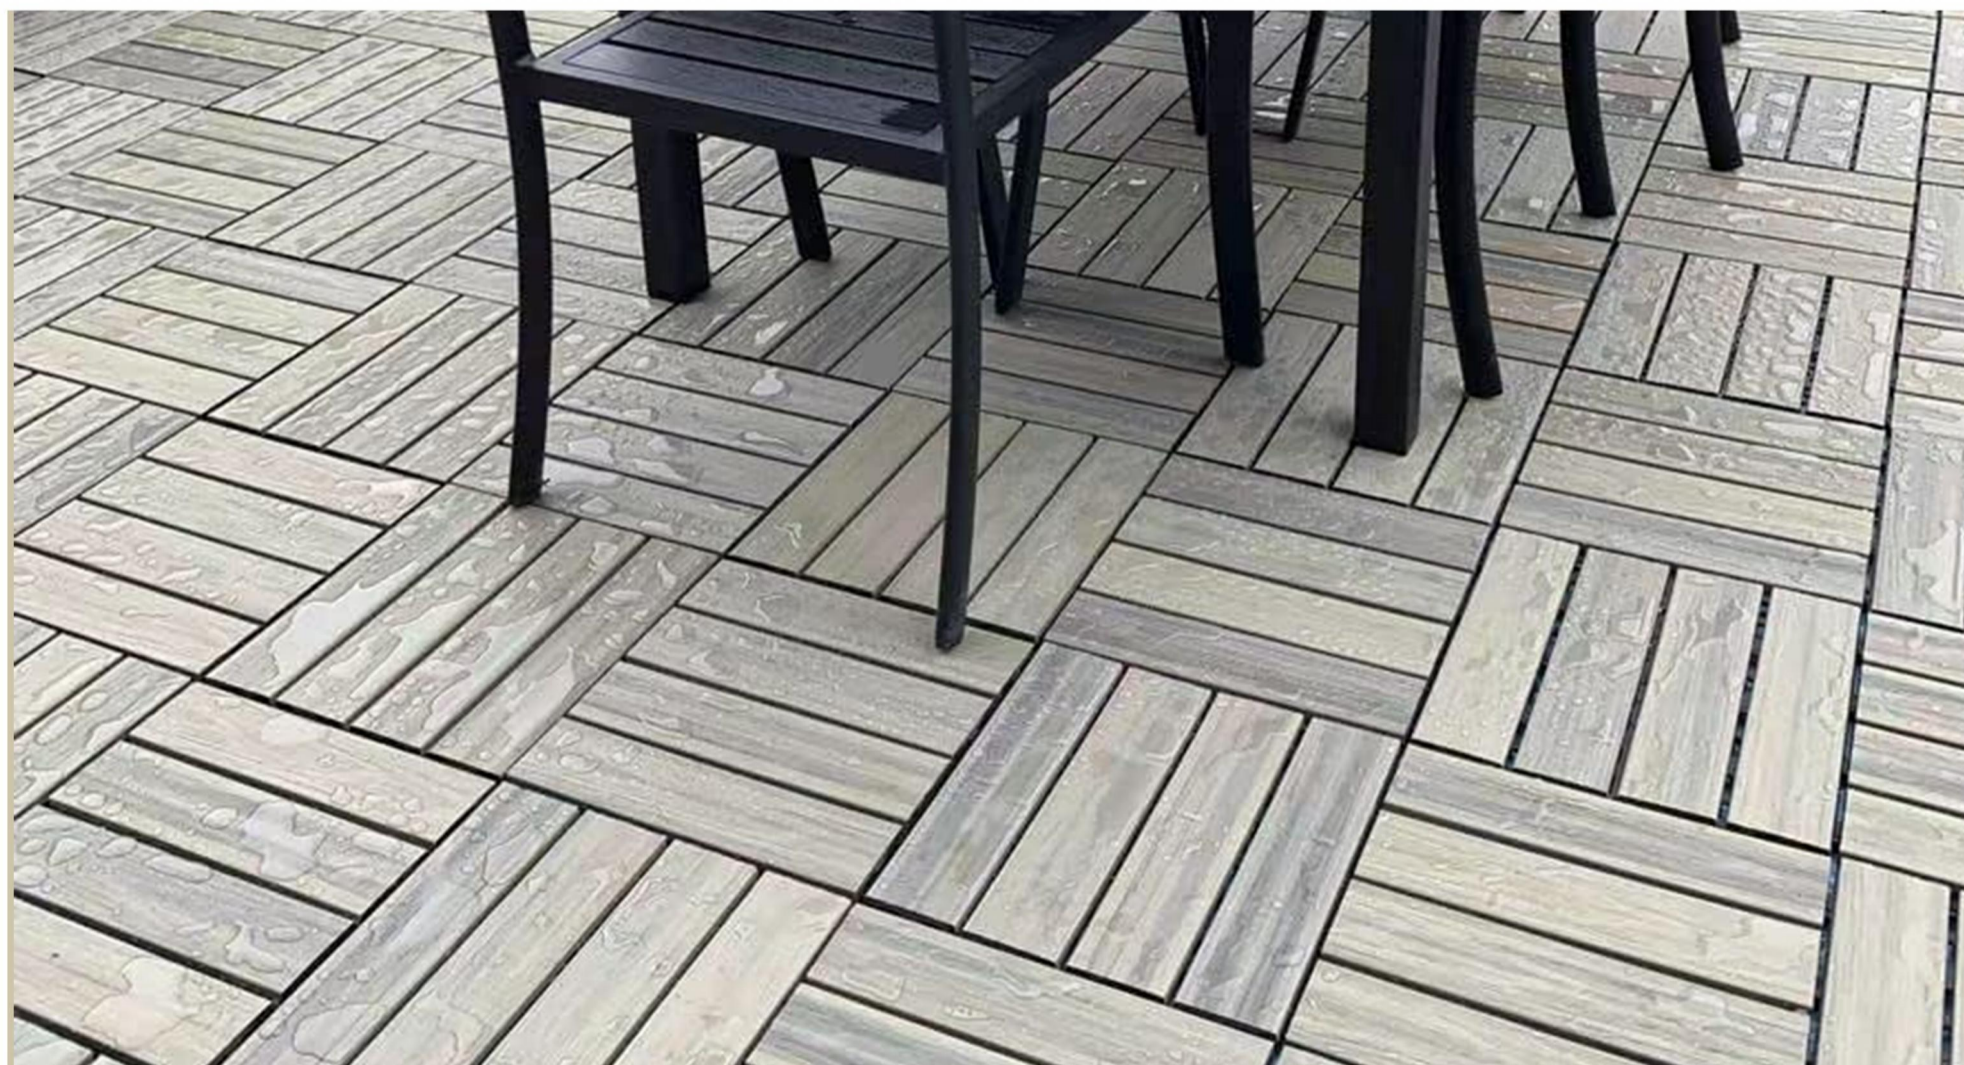

04



05

